


MAGNETIC BULK TAPE ERASER

Erases Open-Reel Tape, Cassettes, Cartridges and Computer Diskettes

Your Magnetic Bulk Tape Eraser provides far superior erase characteristics than that which is built into a tape deck or computer peripheral product. Benefits include:

- Total erasure of entire media
- Background tape noise is reduced to virgin tape levels
- Eliminates computer program-blowing glitches on magnetic disks

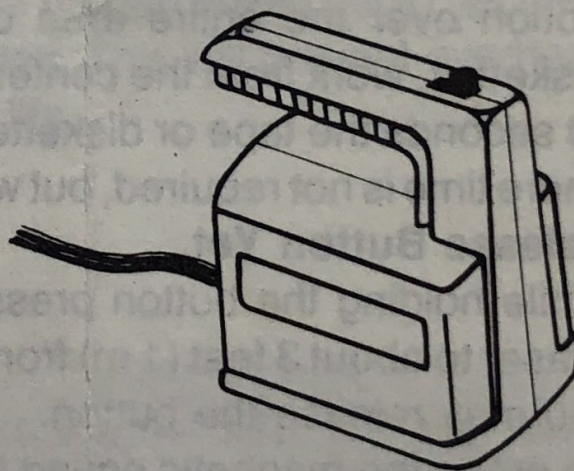

USE

1. Plug into a standard 110-120 V AC power outlet (50 or 60 Hz).
2. Hold the unit in your hand as shown and use your thumb to pull button **back** (to "on" position).
3. While you hold the button "on," place the bottom of the Eraser in contact with the Reel of Tape, Cassette, Cartridge or Diskette. Move Eraser *slowly* in a circular motion over the entire area of the tape (for Reels and Diskettes, work from the center to the outside). Within 7 to 10 seconds the tape or diskette will be fully demagnetized (more time is not required, but will cause no harm). **Do NOT Release Button Yet.**
4. While holding the button pressed back, slowly move the Eraser to about 3 feet (1 m) from the Tape or Diskette. Now you may release the button.
5. To erase the magnetic sound track from film, position film reel with magnetic track side up and proceed as noted above.

WARNING: To prevent fire or electrical shock, do not expose this appliance to rain or moisture.

INTERMITTENT DUTY: This unit is designed for intermittent use only — 1 minute on and 20 minutes off. **Do not exceed this.** It is normal for the unit to become warm while in use. Thus, after one minute of use (button pulled back), let the unit cool off for at least 20 minutes. This will prevent overheating and help to assure longest life.


CAUTION: Do not use this Magnetic Tape Eraser near delicate instruments, electronic watches, Cardiac Pace Makers or recorded tapes, films or disks. This unit will not erase metal tape.

RADIO SHACK LIMITED WARRANTY

This equipment is warranted against defects for 90 days from date of purchase. Within this period, we will repair it without charge for parts and labor. Simply **bring your sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover equipment subjected to misuse or accidental damage.

This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

RADIO SHACK  A DIVISION OF TANDY CORPORATION

U.S.A.: FORT WORTH, TEXAS 76102
CANADA: BARRIE, ONTARIO L4M 4W5

TANDY CORPORATION

AUSTRALIA

280-316 VICTORIA ROAD
RYDALMERE, N S W 2116

BELGIUM

PARC INDUSTRIEL DE NANINNE
5140 NANINNE

U K

BILSTON ROAD WEDNESBURY
WEST MIDLANDS WS10 7JN